



Piggy BedSpreads

2x3.5 C&C Cage Assembly Instructions

1. First you will assemble the long sides of the cage. You will need 4 grids per side and 4 connectors. The grids slide into the slots on the bottom of the connectors. Be sure the connectors are fully seated onto the grid. You may need to use a rubber mallet or a block of wood to gently tap the connector into place. The 2 middle grids are overlapped in half and connected together using 2 or 3 zip ties. When done, the long slides of the cage will look like the diagram below.

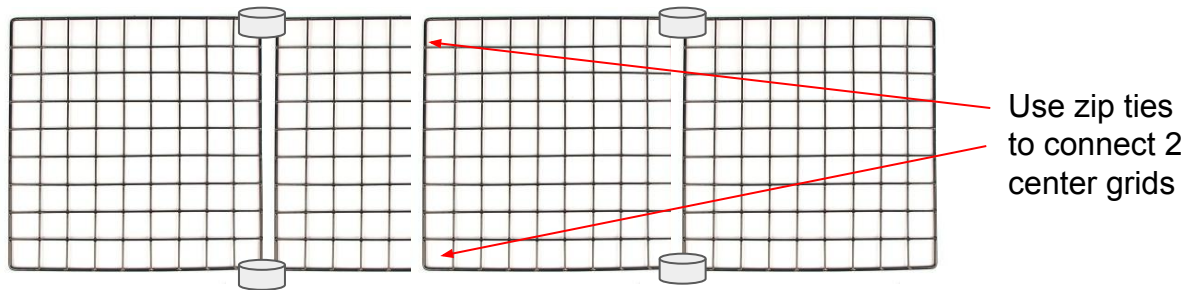

- 2) Next you will assemble the short sides of the cage. For this step you will need 2 grids and 2 connectors per side. When done, the short sides will look like the diagram below.

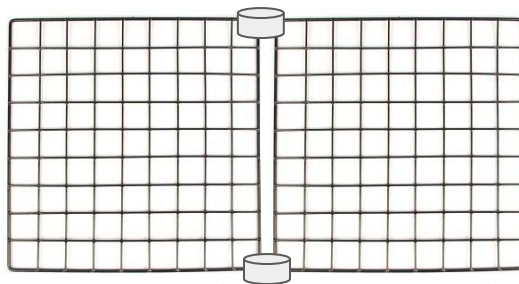

- 3) Now you will connect the long sides to the short sides using the remaining 8 connectors. For added strength we suggest zip tying the grids to each other using the included zip ties. Your grid system is now complete.

- 4) The coroplast tray comes plastic rivets and pre-punched holes to secure the corners of the tray. Fold the side of the coroplast up so that the corner flap is on the outside of the tray. Press one of the small rivets through the hole from the inside of the tray. From the outside of the tray, press the large rivet into the hole until it snaps into the small rivet. Repeat process for the other corners. The coroplast tray will look like the diagram below when complete. Now place the coroplast tray in the grid system and you're done. Congratulations on your new C&C Cage!

